


**KYORITSU PACKTEST INSTRUCTIONS**

# Manganese


## Potassium Periodate Visual Colorimetric Method

Model: WAK-Mn

Main Reagent: Potassium Periodate

Measuring Range: 0.5 - 20 mg/L (ppm)

### How to Use

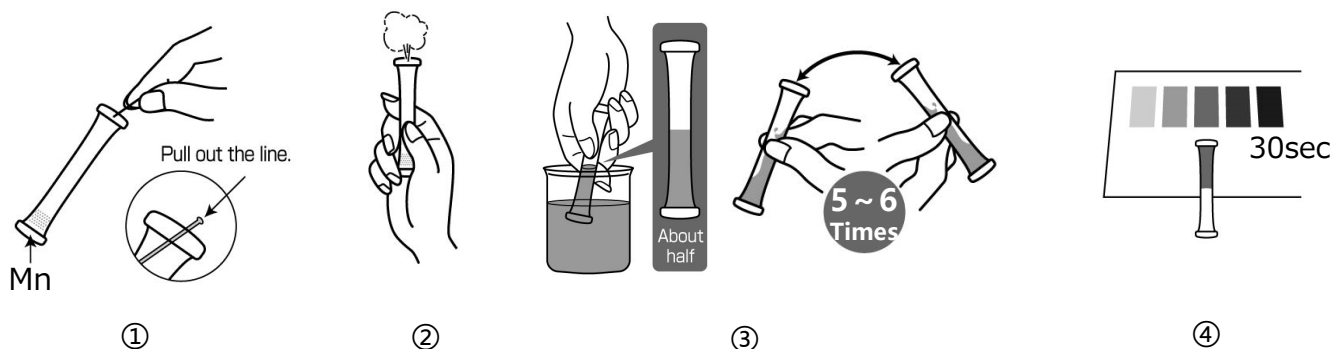

- ① Remove the colored line at the top of the tube to clear the aperture.
- ② Press the tube's side wall to expel air and hold the tube.
- ③ Immerse the aperture of the tube into the sample, release the finger to fill up the tube halfway. Invert the tube back and forth lightly for 5-6 times.
- ④ After 30sec, place the tube on the provided Color Sheet as shown to compare the color.

### How to Read the Result

After the reaction time, compare the color of the tube with Standard Color. The nearest color indicates the concentration value of the analyte in your sample. A color between two standard colors indicate the value between them.

### Handling of PACKTEST Before and After Use

#### First Aid

**Eye Contact** → Immediately flush eyes with plenty of water.

**Skin/Cloth Contact** → Immediately flush contacted area with water.

**Ingestion** → Immediately rinse mouth.

If swallowed the content or any symptom appears, seek medical advice immediately.

#### Storage

Use a package as soon as possible after opening.

#### Disposal

For business use, please follow in the manner consistent with relevant laws and regulations. Otherwise, the tube can be disposed as combustible waste.

## PACKTEST Manganese

### Caution

1. This product allows to measure only dissolved manganese ions (from divalent up to heptavalent). If value including turbidity and precipitation are required, please dissolve them prior to use.
2. The optimum pH upon reaction will be around 7. If the pH of the sample exceeds 5-9, please neutralize with dilute sodium hydroxide solution or dilute sulfuric acid prior to measurement.
3. A Manganese standard solution of 1000 mg/L or more develops a color similar or darker than 20 on the Standard Color but also precipitate. When the value is expected to be high, please dilute the sample prior to use.
4. Keep the sample temperature between 15-40°C. If the sample temperature is low, it requires longer reaction time.
5. Ensure that the PACKTEST tube is filled up to half.
6. Partially undissolved reagent will not affect the measurement.
7. When comparing to the Standard Color, please be sure to read under the daylight. It may be difficult to determine the color under the direct sunlight, certain florescent lights, mercury lamp or LED.
8. You can put the line back into the aperture to seal. This will avoid possibility of spilling the content of the tube.

### Interference

Standard Color is prepared based on the standard solution. If there are some coexisting substances that may cause interference, please compare the result with official method or standard addition method for verification. Below is the list of interference data for on color development when adding each of the single substances to the standard solution.

≤1000mg/L	will not affect	... Al <sup>3+</sup> , B(III), Ba <sup>2+</sup> , Ca <sup>2+</sup> , Cl <sup>-</sup> , F <sup>-</sup> , K <sup>+</sup> , Mg <sup>2+</sup> , Mo(VI), Na <sup>+</sup> , NH <sub>4</sub> <sup>+</sup> , NO <sub>3</sub> <sup>-</sup> , PO <sub>4</sub> <sup>3-</sup> , SO <sub>4</sub> <sup>2-</sup> , Zn <sup>2+</sup> , Residual Chlorine, Anionic Surfactant, Formaldehyde
≤200mg/L	"	... Ni <sup>2+</sup>
≤100mg/L	"	... NO <sub>2</sub> <sup>-</sup>
≤50mg/L	"	... Cu <sup>2+</sup>
≤20mg/L	"	... Cr(VI), Fe <sup>2+</sup> , Fe <sup>3+</sup> , Phenol
≤10mg/L	"	... CN <sup>-</sup>
≤5mg/L	"	... Cr <sup>3+</sup> , I <sup>-</sup>
≤1mg/L	"	... Co <sup>2+</sup>

Seawater does not affect the result.

If many reduction substances coexist, the measured value will be lower.

## **【Caution】**

- This product is made for analyzing water quality purpose only. Do not use for any other purpose.
  - This product contains small amount of chemicals. Please read instruction manual, GHS labels, SDS, and other necessary document thoroughly prior to use.
  - Please keep this information handy for future reference.
- <Safety>
- Please wash your hands thoroughly before and after the test. Do not inhale the chemical reagents.
    - It is highly recommended to wear protective gloves, eye protection, and mask upon using this product.
    - Avoid release chemical reagents or waste solution to the environment.
- <Storage>
- Please keep this product out of reach of children. Keep it in the dry and dark place at room temperature.
- <Other>
- Please check the expiration date shown on the box, and make sure to use within the date.
    - Specifications are subject to change without notice.



**KYORITSU**  
CHEMICAL-CHECK Lab., Corp.

1-18-2 Hakusan, Midori-ku, Yokohama, Kanagawa  
226-0006, JAPAN E-mail:eng@kyoritsu-lab.co.jp

2102